

# Installation Instruction

操作說明書




Single Handle Lavatory Faucet  
單一把手水龍頭

## Replacement Parts

替換配件

Keep this manual for ordering replacement parts.

保留現有配件作為更換

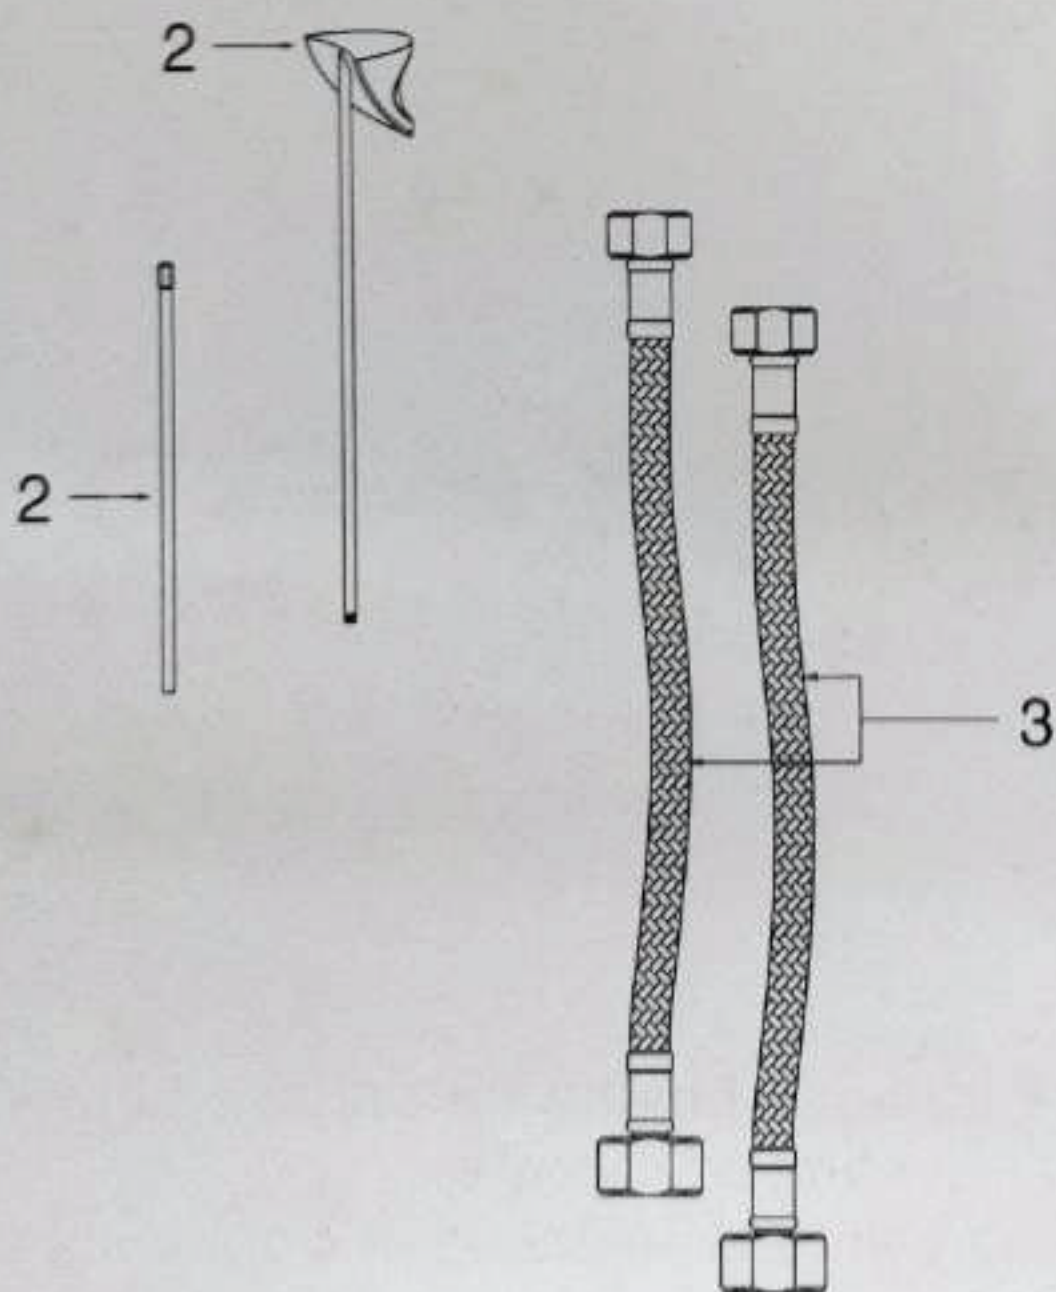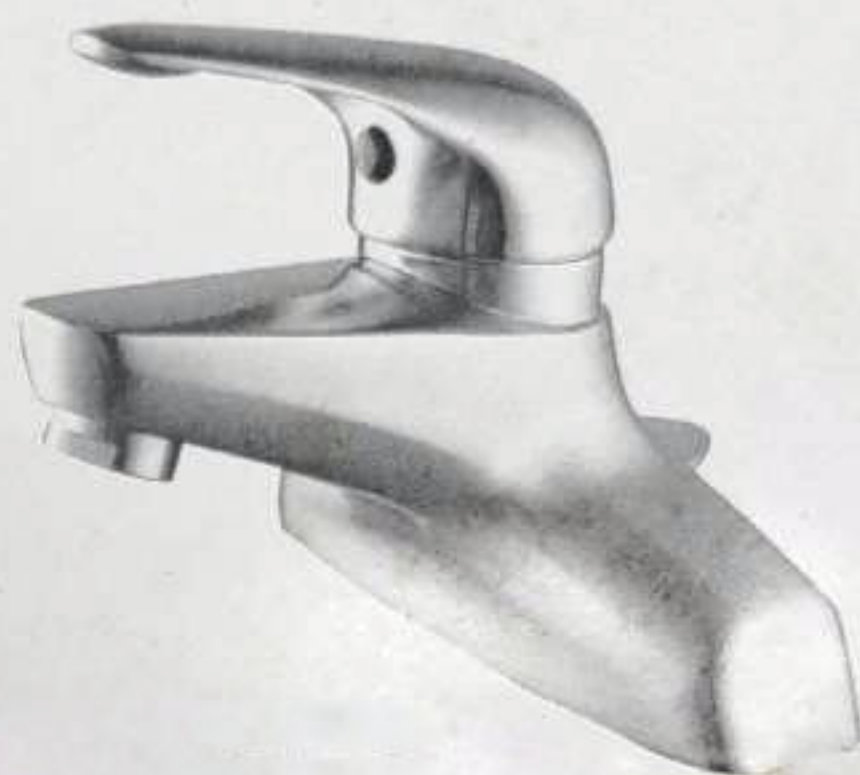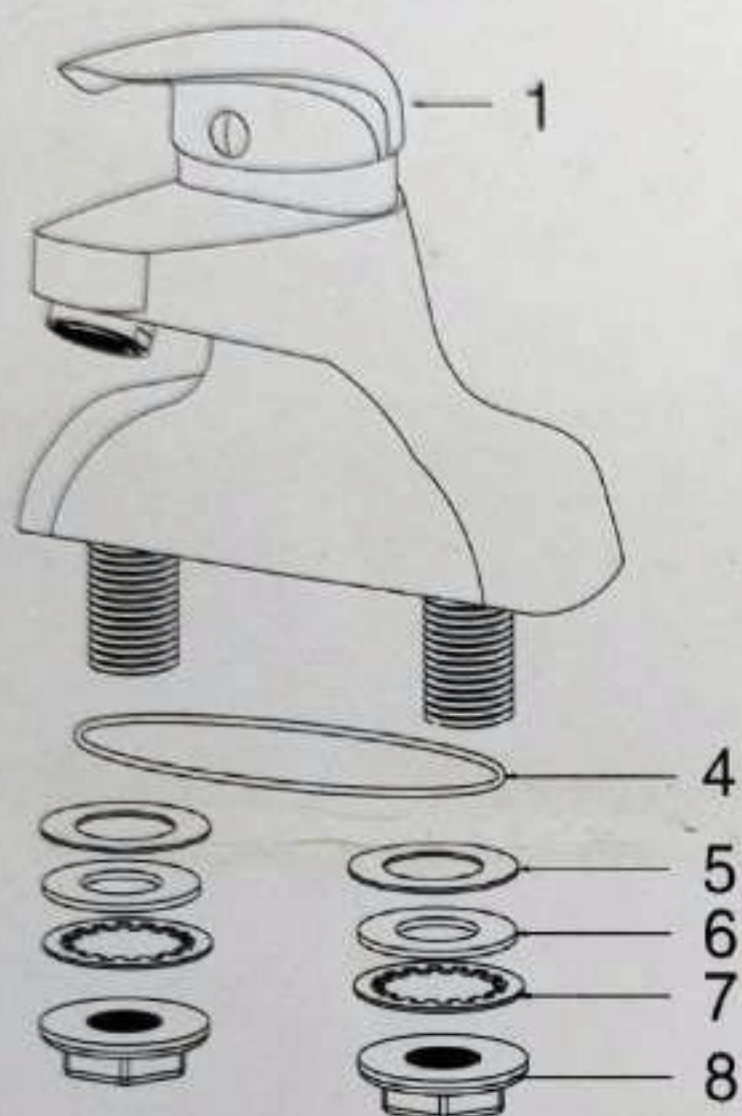


| NO | NAME                             |
|----|----------------------------------|
| 1. | Faucet body<br>水龍頭主體             |
| 2. | Rod<br>金屬桿                       |
| 3. | Supply Pipe<br>不鏽鋼編織管            |
| 4. | O ring<br>橡膠O環                   |
| 5. | Rubber gasket<br>橡膠底部墊片          |
| 6. | Stainless steel gasket<br>不鏽鋼固定片 |
| 7. | Skidproof gasket<br>防滑襯墊         |
| 8. | Hexagon nut<br>六角螺帽              |




# Faucet Installation Procedures

## 水龍頭安裝步驟


Step ①

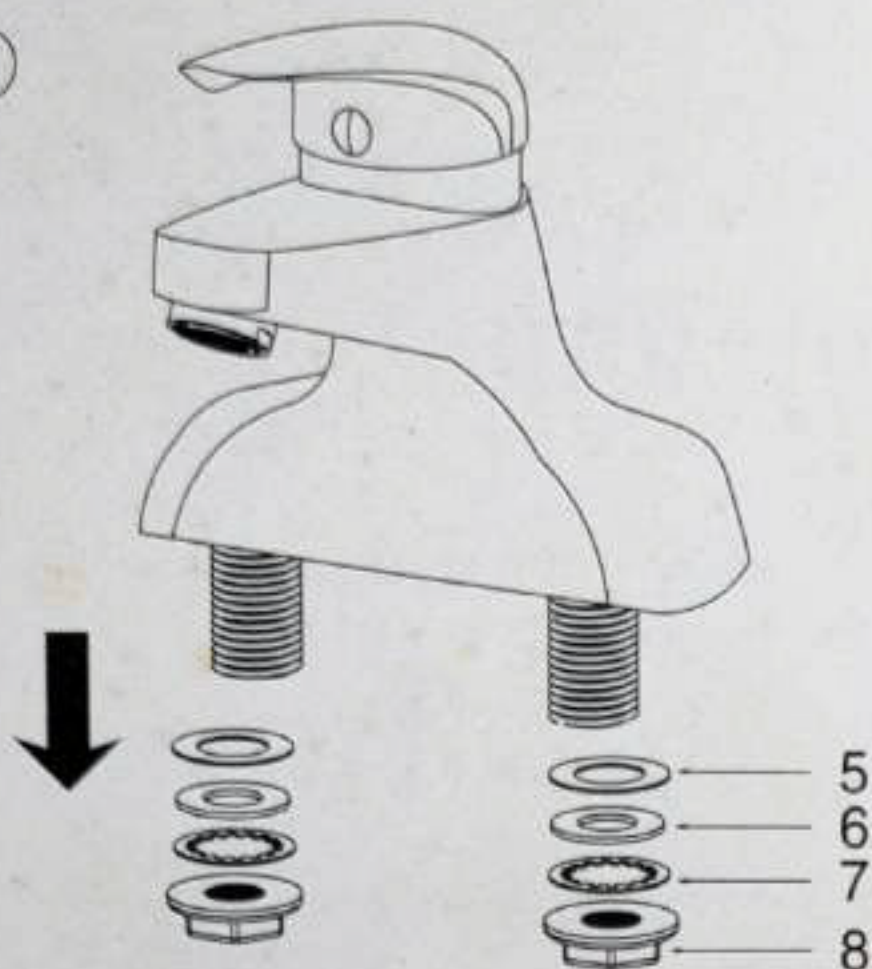


Step ②

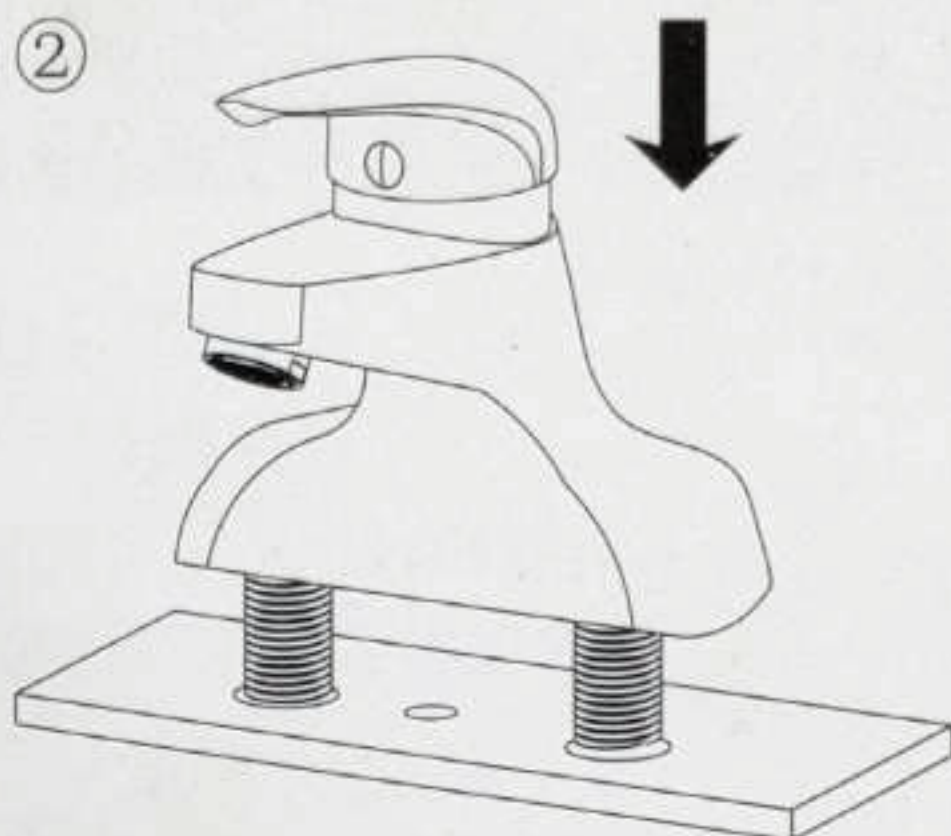


Step ③

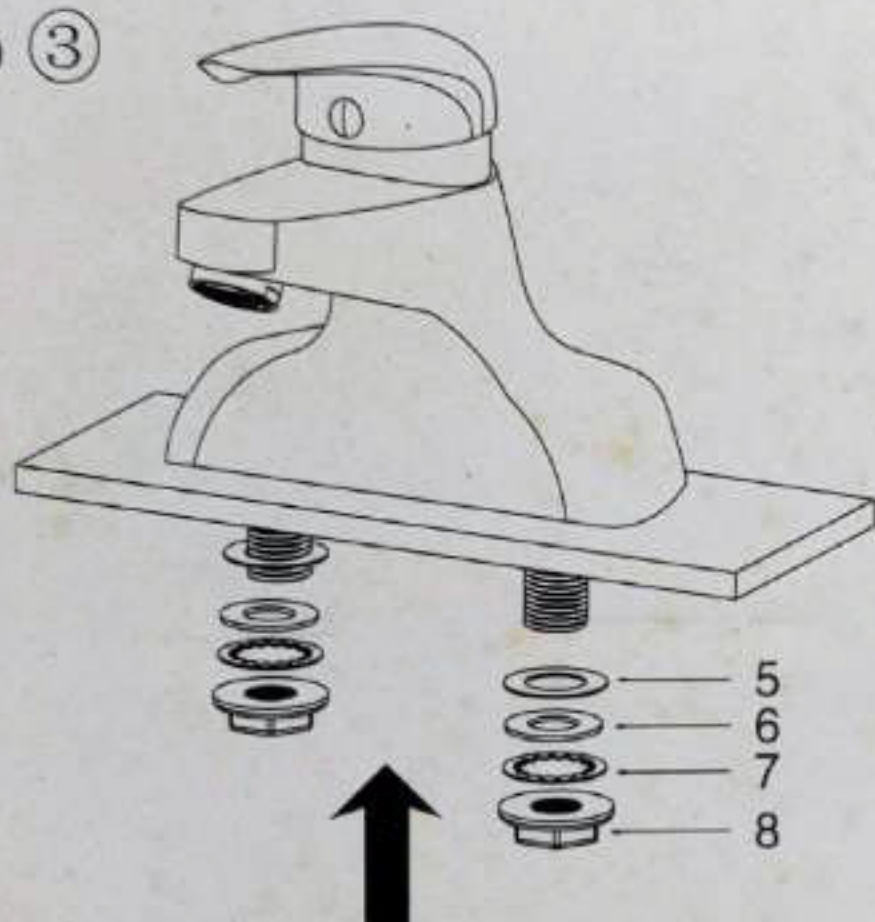


Step ④

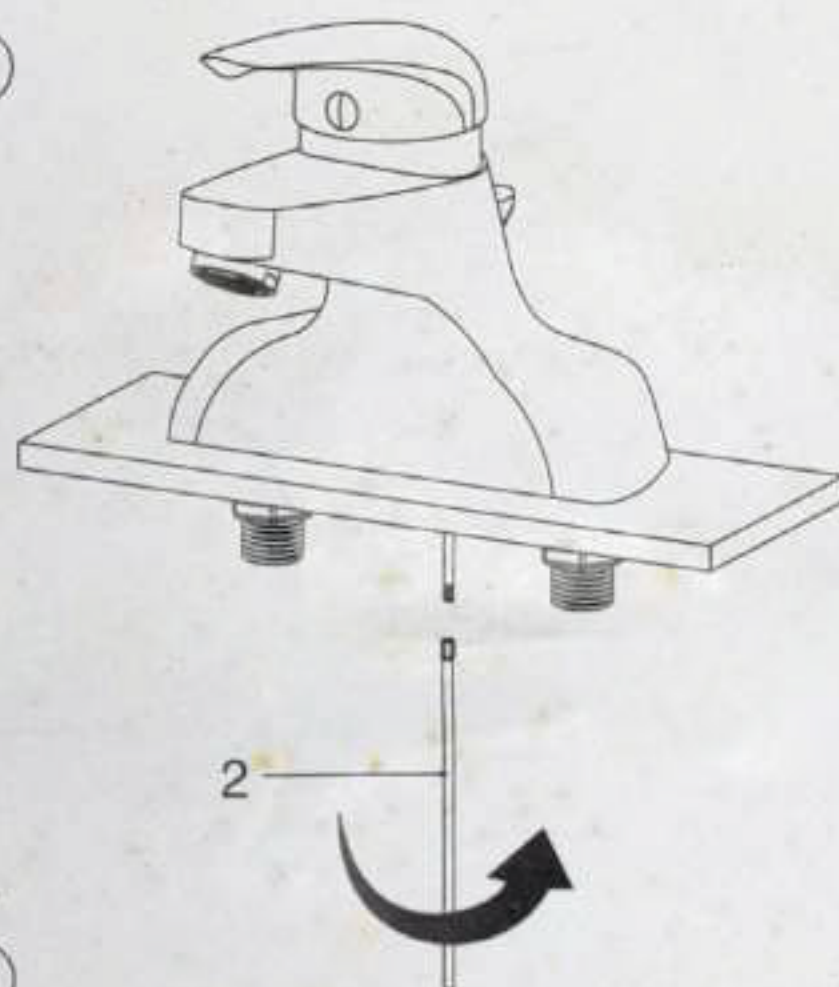

Step ⑤

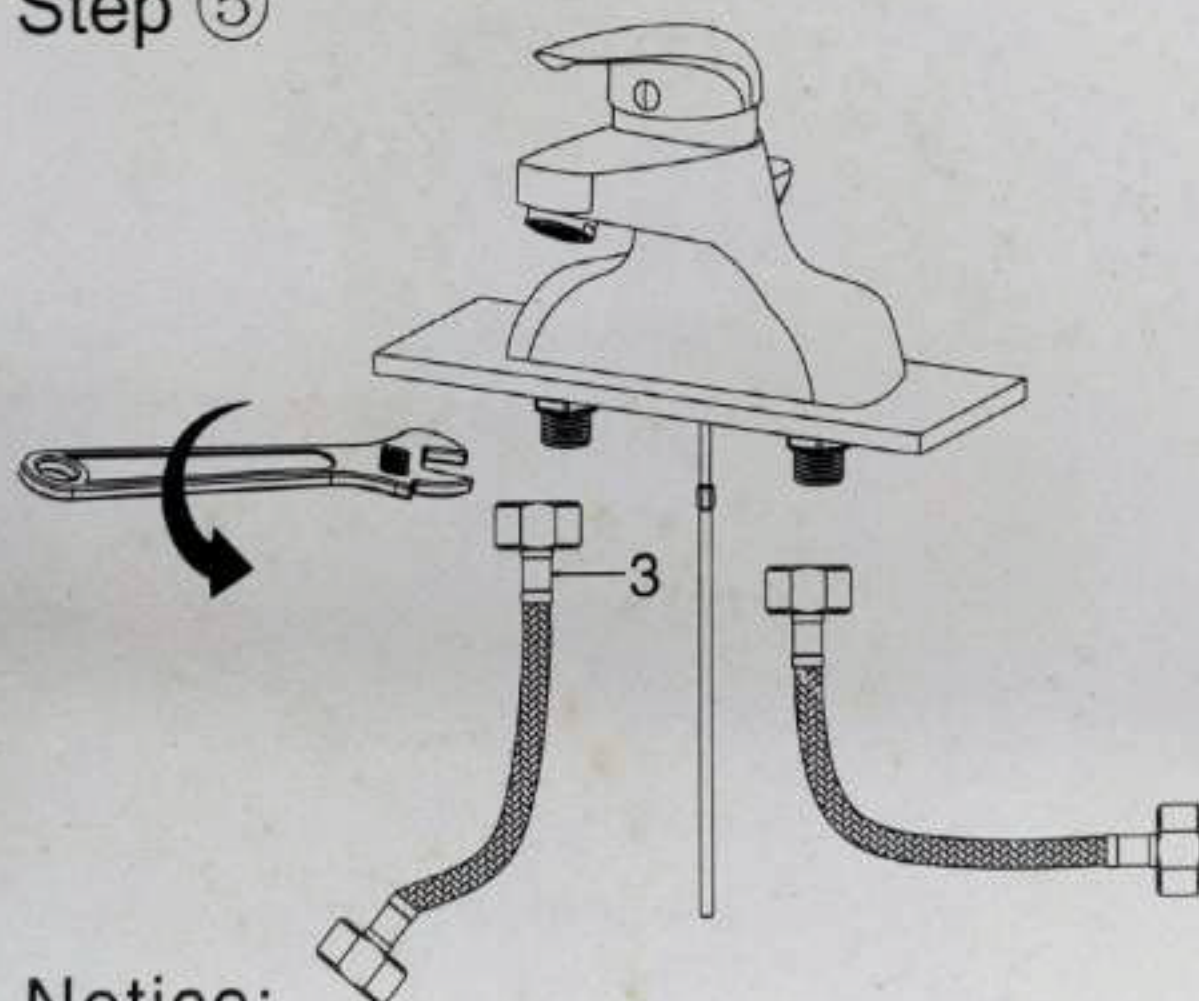

Step ⑥

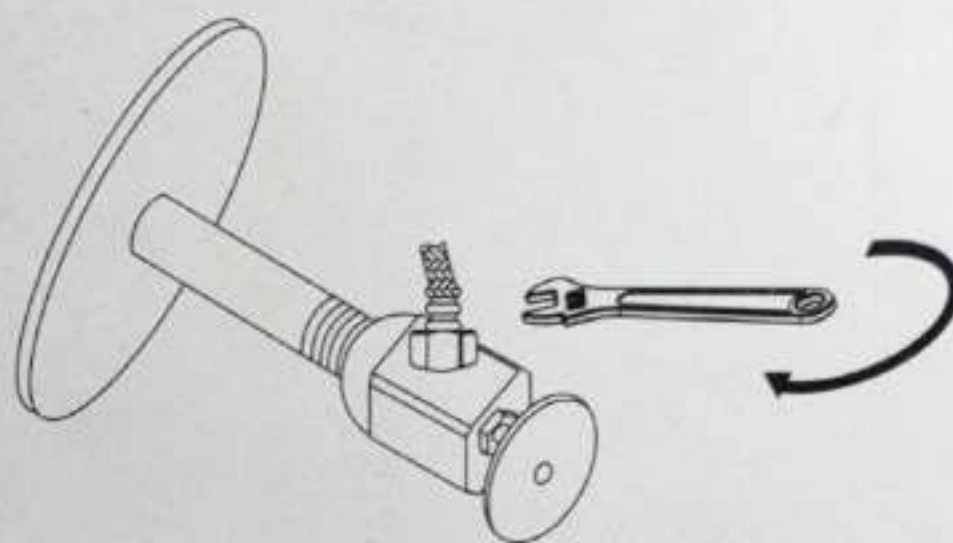

### Notice:

Please removing all of the sand, silt and other things from the water hose before assembling, to avoid blocking the faucet and effecting water rate.  
Please use the special tools to disassemble it and wash with pneumatic equipment, if the faucet blocked.

請於組裝前清除管子裡多餘的泥沙，避免影響出水流量。  
水龍頭阻塞時建議使用特殊氣動工具清理。